


RELAX

SHOE RACK INSTRUCTIONS

W1220mm Shoe Rack

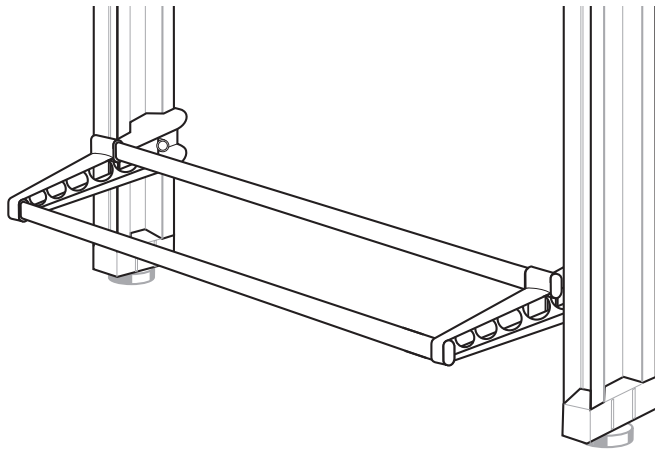


SSR- 2123-048-AN

RELAX






SHOE RACK W1220mm

SSR-2123-048-AN

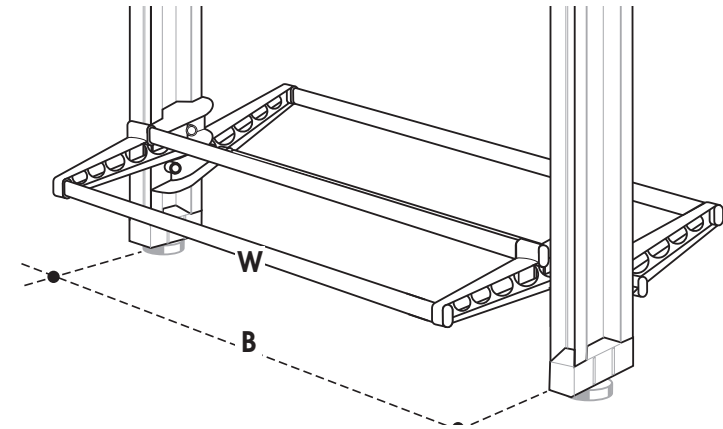

$W - 13\text{mm} = B$
(ie: $W910\text{mm} - 13\text{mm} = B897\text{mm}$)

* Main illustration above shows X2 Shoe racks.

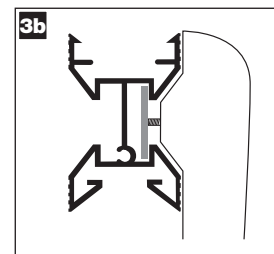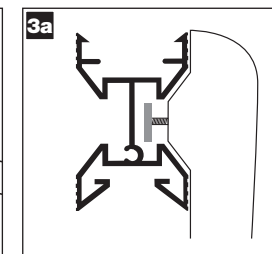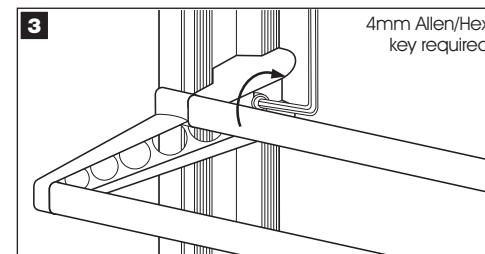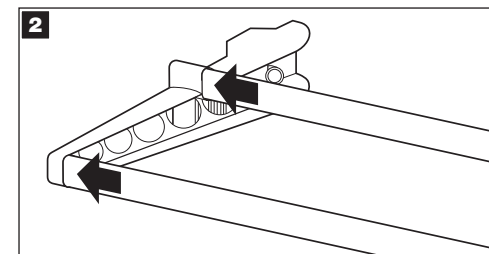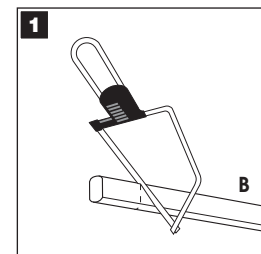

* **Fitting to the Stanchions.** When attaching the brackets to the Stanchion ensure the washer which sits within the Stanchion groove is rotated enough for a secure fitting [3a -3b].